


Profile Specs

End caps are used to fill the gap between the floor and carpet, hearths or against sliding doors.

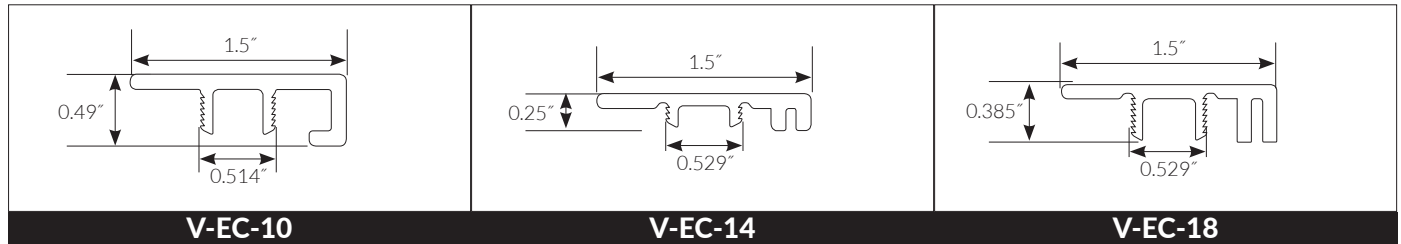

Surface Laminate: Wear resistant | Core Material: Rigid PVC

Installation Guide

1. Install the flooring leaving a 1" gap between the two floors for the end cap installation.

2. Measure and trim to fit.

3. Center the track between the flooring leaving a 1/4" spacing between the track and floor planks. Screw track to subfloor using included screws (or glue down with construction adhesive).

4. Starting at one end, press the molding into the track inching along the length of the molding. *It will NOT snap in all at once.*
You may also use a rubber mallet.