


Profile Specs

Surface reducers are used to fill the gap between two floors of unequal heights.

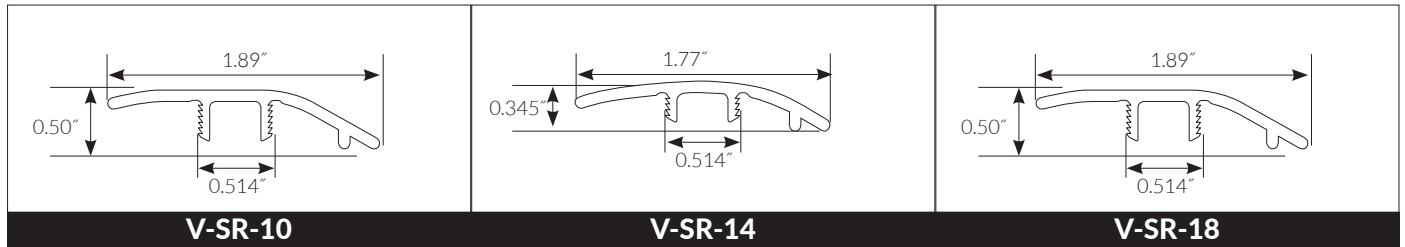

Surface: Wear resistant | **Core Material:** Rigid PVC

Installation Guide

1. Install the flooring leaving a 1" gap between the two floors for the surface reducer installation.

2. Measure and trim to fit.

3. Center the track between the flooring leaving a 1/4" spacing between the track and floor planks. Screw track to subfloor using included screws (or glue down with construction adhesive).

** May need to use supplied shim*

4. Starting at one end, press the molding into the track inching along the length of the molding. *It will NOT snap in all at once.*
You may also use a rubber mallet.