



tape measure



angle finder



scraper



table/circular saw



painters tape



construction adhesive



caulk gun

Tools Needed

STEP

1

Carefully measure width and depth of the step. Then cut (*decor up*) your **BestTread™** to size and dry-fit to ensure a proper fit.

*(Measure and cut each stair/tread separately as they may be different. Steps may not all be square.)*

PRO TIP

Use painters tape on the cut line before cutting to prevent chatter at the cut edge of your **BestTread™**.


BEFORE YOU BEGIN

Remove any carpet, staples, etc. from your stairs

STEP

2

Apply roughly a 1/4" bead of **urethane construction adhesive** about 1" from the edges and in a serpentine pattern with approx. 1.5" of space between each line. **Add a generous amount of adhesive into the bullnose as well.**

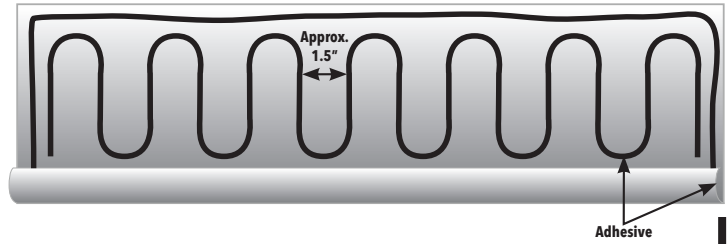

STEP

3


Starting at the bottom step, carefully position **BestTread™** on step approx. 1" from the riser and slide into place. Apply firm pressure to tread surface and follow adhesive manufacturers application guidelines. **Remove any excess adhesive immediately! Allow sufficient dry time (as recommended by adhesive manufacturer) before using your steps.**

PRO TIP

We recommend securing the back end with finishing nails until the construction adhesive cures.

IF YOUR EXISTING STAIR TREAD HAS A SQUARE END (NO BULLNOSE) FOLLOW THE PLACEMENT PROCEDURE BELOW:


YES

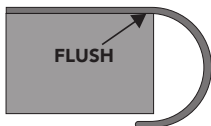

NO



YES

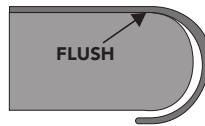

NO

