



Drywall Lite Frame Installation Guide


Materials Needed

- Screw driver or drill
- Mounting screws included in box


IMPORTANT: For wall and ceiling surfaces ONLY.

DO NOT install on floors!


Instructions

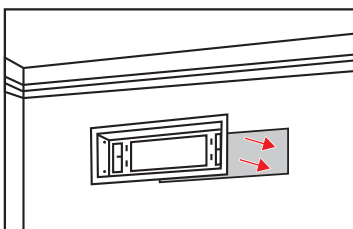


1. Dry fit Drywall Lite Frame into duct opening.

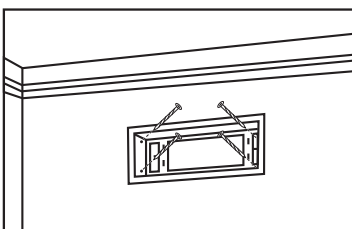

2. Use provided screws to fasten to substrate.

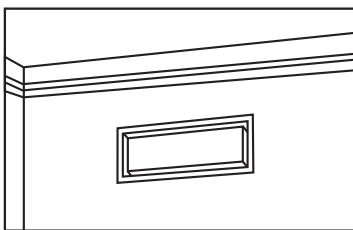

3. Pop plate into place.

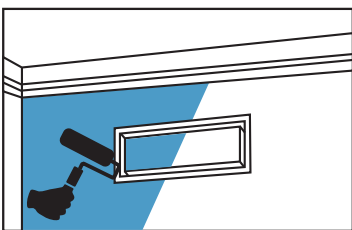

4. Paint walls, and all vent surfaces.
Enjoy!

*can also be used with wallpaper

*No airflow adjustment on this model

Support

support@ariavent.com

ariavent.com

Manufactured entirely in Canada

Patent information

www.ariavent.com/pages/patents