



TRANSITIONINSTALLATION

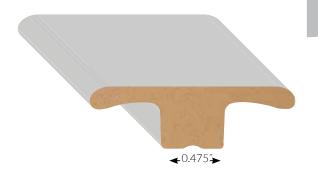

Dimension: 1.5"w x 0.47"h



Install the flooring leaving a 1-1/8" gap between the two floors for the t-molding installation.




Used to fill the gap between two floors of equal height. Most common areas are in doorways or to join two laminate floors.


Used with floors 7-10mm in height.

For concrete use appropriate Rawl Plugs (Not Included)


Glue with construction adhesive (do not glue floor)

Surface: Wear resistant laminate **Core Material:** Moisture resistant MDF

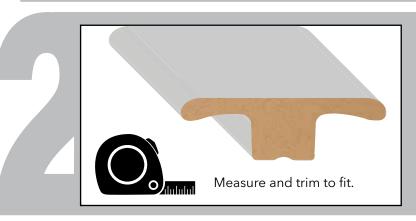

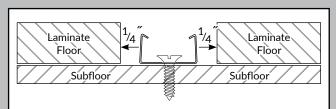

Center the track between the flooring with 1/4" spacing between the track and floor plank and screw to the subfloor.

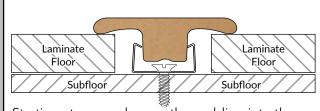

Starting at one end, press the molding into the track inching along the length of the molding. *It will NOT snap in all at once.* You may also use a rubber mallet.