Installing your Best read with returns





BEFORE





Tools Needed






STEP 1

Carefully measure width and depth of the step. Reduce your "width" measurement by 1/4" to allow space for the return molding (DO NOT cut the miter see fig. 1). Then cut (decor up) your **BestTreadTM** to size and dry-fit to ensure a proper fit.

(Measure and cut each stair/tread separately as they may be different. Steps may not all be square.)



Remove any carpet, staples, etc. from your stairs

For a finished look on your return, remove the bullnose from the side of your step before measuring and cutting your BestTreadTM


PRO **TIP**

Use painters tape on the cut line before cutting to prevent chatter at the cut edge of your **BestTread™**.

tig. 1

2

Apply roughly a 1/4" bead of **urethane construction** adhesive about 1" from the edges and in a serpentine pattern with approx. 1.5" of space between each line. **Add a generous amount of adhesive into the bullnose as well.**

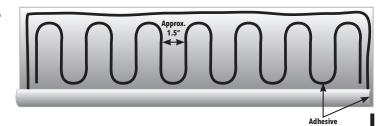

STEP 3


Starting at the bottom step, carefully position **BestTreadTM** on step approx. 1" from the riser and slide into place. Apply firm pressure to tread surface and follow adhesive manufacturers application guidelines. **Remove any excess adhesive immediately! Allow sufficient dry time** (as recommended by adhesive manufacturer) before using your steps.



We reccommend securing the back end with finishing nails until the construction adhesive cures.

STEP 4

Premiter the end of the return, measure the depth of the step along the straight edge of the **BestTreadTM**. Then cut the straight edge of the return moulding as the length necessary for your step.



STEP 5

Apply a generous bead of construction adhesive to the back side of the return moulding and press onto 1/4" left of your original step. Be sure to align the miters of the return and **BestTreadTM**.



Miter the back end of the return and "dog" ear for a more finished look.

